



## Channels and Power Levels

---

For channel and maximum power level settings, refer to the *Channels and Maximum Power Settings for Cisco Aironet Lightweight Access Points and Bridges* document available on the Cisco Wireless documentation page of Cisco.com.

To browse to the document, follow these steps:

- 
- Step 1** Click this link and go to the Cisco Wireless documentation home page:  
<http://www.cisco.com/en/US/products/hw/wireless/index.html>
  - Step 2** Click **Support**. The Support and Documentation page displays.
  - Step 3** Click **Wireless**
  - Step 4** Click **1550**.
  - Step 5** Click **Install and Upgrade**.
  - Step 6** Click **Install and Upgrade Guides**.
  - Step 7** Click **Channels and Maximum Power Settings for Cisco 1550 Series Outdoor Mesh Access Points** document.
-

