

CUCM Dial Plan Considerations for CMR in CUCM-Centric Deployment Configuration Example

Contents

[Introduction](#)

[Prerequisites](#)

[Requirements](#)

[Components Used](#)

[Configure](#)

[Network Diagram](#)

[Configurations](#)

[Option 1: CMR Format - user1@meet.company.com](#)

[Option 2: CMR Format - meet.user1@company.com](#)

[Verify](#)

[Troubleshoot](#)

[Related Information](#)

Introduction

This document describes the dial plan considerations on Cisco Unified Communications Manager (CUCM) when Collaboration Meeting Rooms (CMR) are used in a CUCM-centric deployment. It discusses the different options, the implications, and the configuration.

Prerequisites

Requirements

CMR is supported as of TelePresence Conductor Version XC2.3 and TelePresence Management Suite Provisioning Extension (TMSPE) Version 1.2. This document does not cover the configuration of CMR, which is covered in [Cisco TelePresence Management Suite Provisioning Extension Deployment Guide](#).

Components Used


The solution in this example uses TelePresence Management Suite (TMS), TMSPE, TelePresence Conductor, TelePresence Server (TS), and CUCM. The other illustrated components (Expressway-C and Expressway-E) are optional and provide connectivity to endpoints on the Internet and/or Business-To-Business Calls.

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, make sure that you understand the potential impact of any command.

Configure

Network Diagram

Since this document uses a CUCM-centric deployment, the Expressway series is used and the Conductor is integrated with CUCM. A typical deployment is illustrated here:

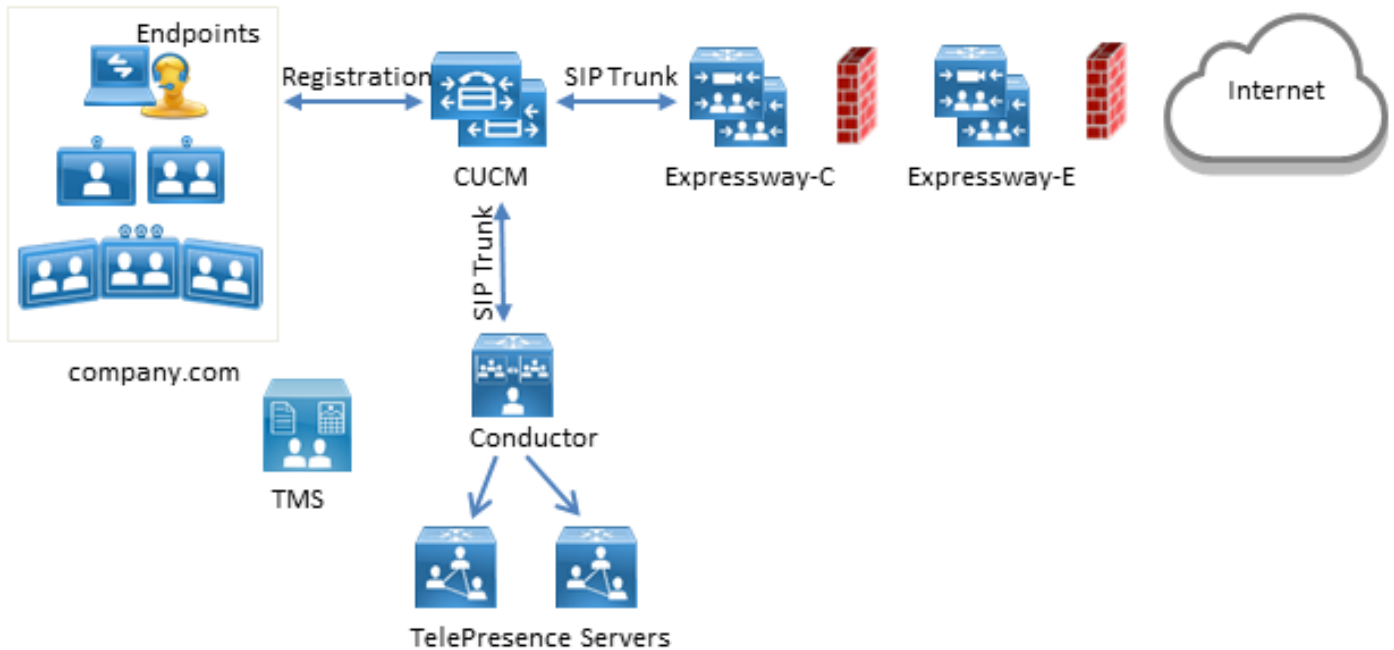

In this example, the Session Initiation Protocol (SIP) domain in the deployment is **company.com** and users can be reached via Uniform Resource Identifier (URI) dialing, for example **user1@company.com**.

Configurations

The CMR are hosted by the TelePresence Servers. In order for users to dial into them, calls must be routed towards the SIP Trunk to the Conductor. There are two options for the format of the URI for the CMR.

Option 1: CMR Format - *user1@meet.company.com*


The first option uses a subdomain of **company.com** as the domain portion in the URIs of the CMR: **meet.company.com**.

This makes the dial plan configuration on CUCM straightforward; you can configure a new SIP Route Pattern with Domain Routing for this subdomain as illustrated here:

SIP Route Pattern Configuration

 Save  Delete  Copy  Add New

Status

 Status: Ready

Pattern Definition


Pattern Usage Domain Routing
IPv4 Pattern*
IPv6 Pattern
Description
Route Partition
SIP Trunk/Route List* [\(Edit\)](#)
 Block Pattern

Calling Party Transformations

Use Calling Party's External Phone Mask
Calling Party Transformation Mask
Prefix Digits (Outgoing Calls)
Calling Line ID Presentation*
Calling Line Name Presentation*

Connected Party Transformations

Connected Line ID Presentation*
Connected Line Name Presentation*

 *- indicates required item.

Note that in this example, no Route Partition is configured on the SIP Route Pattern and is hence reachable to all devices. Class Of Control using Call Search Spaces (CSS) and Partitions can be used in order to restrict certain users/devices to dial these patterns.

Option 2: CMR Format - *meet.user1@company.com*


The second option uses the main domain as the domain portion in the SIP URIs of the CMR: **company.com**.

SIP Route Patterns do not support regular expressions, so you could configure the SIP Route Pattern as illustrated here:

SIP Route Pattern Configuration

 Save  Delete  Copy  Add New

Status

 Status: Ready

Pattern Definition


Pattern Usage: Domain Routing
IPv4 Pattern*:
IPv6 Pattern:
Description:
Route Partition:
SIP Trunk/Route List*: [\(Edit\)](#)
 Block Pattern

Calling Party Transformations

Use Calling Party's External Phone Mask
Calling Party Transformation Mask:
Prefix Digits (Outgoing Calls):
Calling Line ID Presentation*:
Calling Line Name Presentation*:


Connected Party Transformations

Connected Line ID Presentation*:
Connected Line Name Presentation*:


 *- indicates required item.

With this configuration, every URI that matches the domain portion **company.com** that is not in the CUCM database (locally-registered endpoints) is routed to the Conductor. It is important to note that calls to URIs not registered on CUCM are sent to the Conductor (even for URIs the Conductor is not aware about). In order to overcome this, you can use the InterCluster Lookup Service (ILS) import, which is described later.

The previous solution works when the deployment does not have any endpoints registered to the Video Communication Server (VCS) that shares the same domain or Lync integration that shares the same domain. In case there are endpoints or a Lync integration that share the same domain, some calls with the domain portion **company.com** must be sent to Expressway-C/VCS-C, while calls towards the CMR (which also have the domain portion **company.com**) must be routed to the Conductor. An example deployment where the same domain is shared between endpoints registered to CUCM and a third-party Call Control system is shown here:

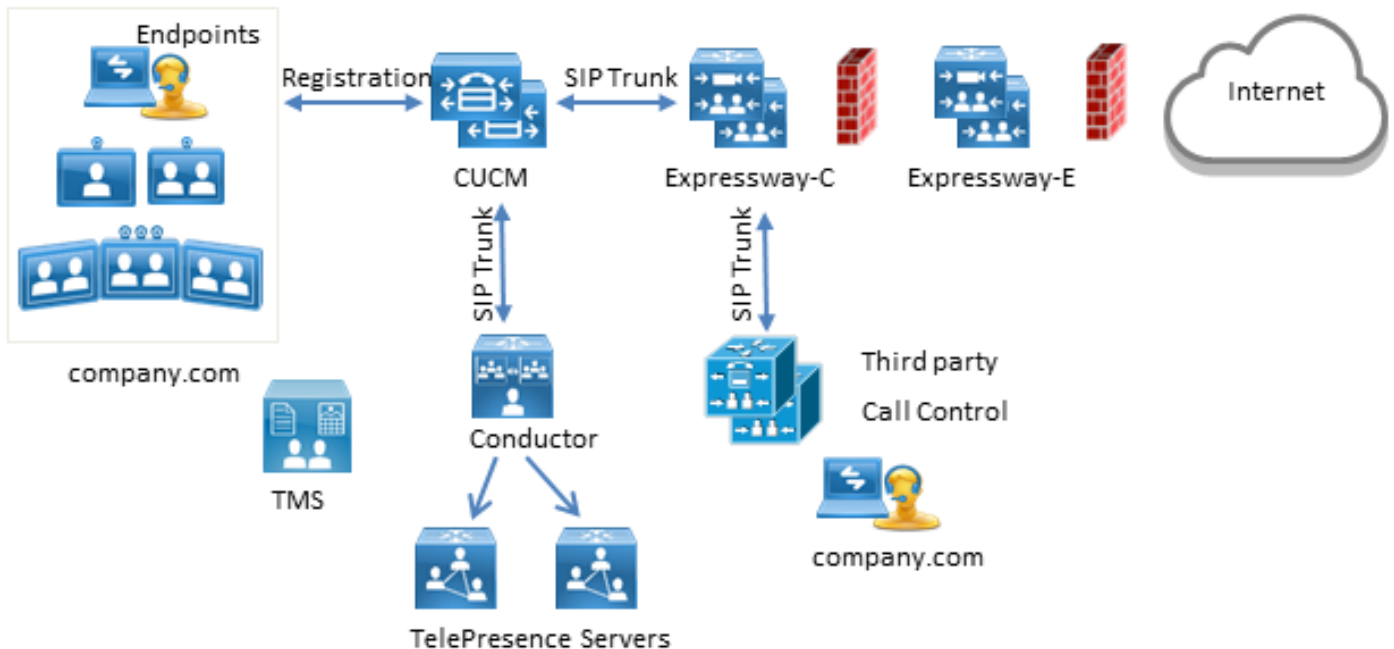

In this situation, you must use the ILS import feature in order to import Conductor SIP URIs as Global Catalog into the CUCM ILS table. As the source for this import, you can export the room data in TMS. This option is available under **System > Provisioning > Users**.

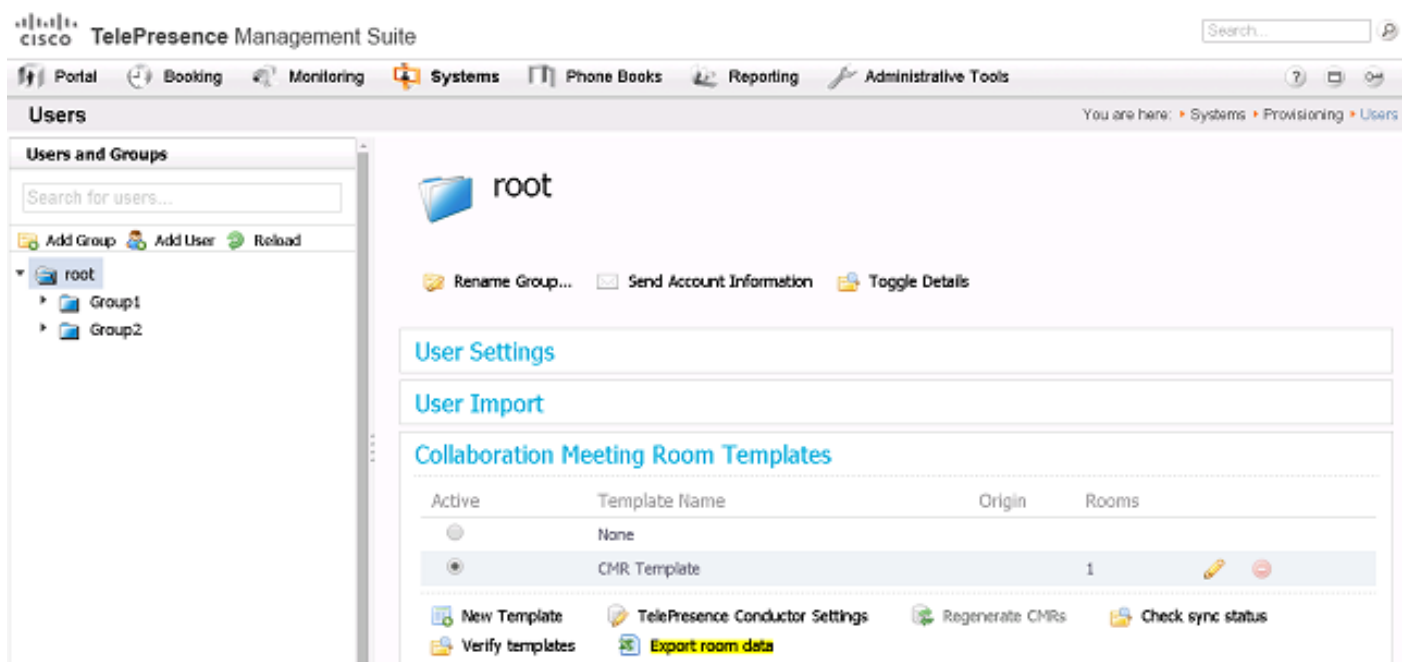

It is important to note, however, that if the CMR has not been created by the user, the room is not listed in this export. This means that you must perform this procedure every time a new room is created or export data from Active Directory (AD) in order to build the list for all users.

On CUCM, you must complete these steps:

1. Make sure the Cisco ILS and the Cisco Bulk Provisioning Service are activated and run.
2. Change the Role of the cluster to Hub Cluster under **Advanced Features > ILS Configuration**.

ILS Configuration Related Links:

Save Refresh

Status

- Found 1 hub cluster(s), 0 spoke cluster(s), and 1 directory URI imported catalog(s).
- Enterprise Parameters Cluster ID must be changed from StandAloneCluster in order for the Intercluster Lookup service to function properly.

Intercluster Lookup Service Configuration

Role: Hub Cluster

Register to Another Hub...

Exchange Global Dial Plan Replication Data with Remote Clusters

Advertised Route String *: pub.company.com

Synchronize Clusters Every*: 10 (1-1440 minutes)

3. Give the Cluster ID a proper name under **System > Enterprise Parameters**.

Enterprise Parameters Configuration

Save Set to Default Reset Apply Config

Status

Status: Ready

Enterprise Parameters Configuration

Parameter Name	Parameter Value
Cluster ID *	HubCluster

4. Create a Global Dial Plan Catalog under **Call Routing > Global Dial Plan Replication > Imported Global Dial Plan Catalogs**. The Route String is used in conjunction with SIP Route Patterns in order to route calls to the Conductor: you associate the URIs for the CMR with this Global Dial Plan Catalog, CUCM then uses the Route String configured in order to decide how to route the call (instead of the original URI). This way, you can route calls with the same domain portion to a different SIP Trunk:

Imported Global Dial Plan Catalog Configuration

Save Delete Copy Add New

Status

Status: Ready

Imported Global Dial Plan Catalog Information

Name*	ImportedGlobalDialPlanCatalog
Description	
Route String*	collaborationmeetingrooms

5. Configure a SIP Route Pattern that matches the Route String in the configured Global Dial Plan Catalog so that the imported URIs associated with the Global Dial Plan Catalog are

routed to the Conductor SIP Trunk:

SIP Route Pattern Configuration

Save Delete Copy Add New

Status

Status: Ready

Pattern Definition

Pattern Usage	Domain Routing
IPv4 Pattern*	<input type="text" value="collaborationmeetingrooms"/>
IPv6 Pattern	<input type="text"/>
Description	<input type="text"/>
Route Partition	< None > ▼
SIP Trunk/Route List*	SIP_Conductor_Rendezvous ▼ (Edit)

6. Upload the text file that contains the SIP URIs of the CMR as Imported Directory URIs and Patterns under **Bulk Administration > Upload/Download Files**:

File Upload Configuration

Save

Status

Status: Ready

Upload the CSV file

File: *	<input type="button" value="Choose File"/> importeddirectoryuri.txt
Select The Target *	Imported Directory URIs and Patterns ▼
Select Transaction Type *	Insert Imported Directory URIs and Patterns ▼
<input type="checkbox"/> Overwrite File if it exists.**	


Your import file should look like this:

```
PatternType,PSTNFailover,Pattern
URI,,meet.user1@company.com
URI,,meet.user2@company.com
```


7. Import the URIs with the imported text file and the created Global Dial Plan Catalog under **Bulk Administration > Directory URIs and Patterns > Insert Imported Directory URI and**

Pattern Configuration.

Insert Imported Directory URI and Pattern Configuration



Status

 Status: Ready

Bulk Imported Directory URI and Pattern Information

File Name * [\(View File\)](#) [\(View Sample File\)](#)

Imported Global Dial Plan Catalog *

Job Information

Job Description

Run Immediately Run Later (To schedule and activate this job, use Job Scheduler page.)





Once the job has been completed, calls to URIs in the text file are routed to the SIP trunk to the Conductor.

Verify


When no URIs are imported in the Global Catalog, you can test if you call the URI of a CMR that has been created. On CUCM, you must make sure:

- The SIP Trunk towards the Conductor is In Full Service:

Trunk Configuration

 Save  Delete  Reset  Add New

Status

 Status: Ready

SIP Trunk Status

Service Status: Full Service

Duration: Time In Full Service: 0 day 0 hour 4 minutes

Device Information

Product:	SIP Trunk
Device Protocol:	SIP
Trunk Service Type	None(Default)
Device Name*	<input type="text" value="SIP_Conductor_Rendezvous"/>

• The CSS of the calling device must contain the partition configured on the SIP Route Pattern. In case URIs have been imported into the Global Catalog, you also must make sure that:

- The import job was completed Successfully under **Bulk Administration > Job Scheduler:**

Job Scheduler Related Links: [Back To Find/List](#) [Go](#)

Delete

Status: ready

Server Date and Time: 10 maart 2015 12:31:19 CET

Job Details

Job id* 1422779417
 Job Status* Completed
 Scheduled Date Time 02/01/2015 09:30:17
 Submit Date Time 02/01/2015 09:30:17
 Sequence* 1
 Job Description Insert Imported Directory URIs and Patterns
 Frequency* Once
 Job End Time
 Last Modified By ccadmin

Transaction Details

CSV File Name [importeddirectoryuri.txt](#)

Job Results

Job Launched Date Time	Job Result Status	Number Of Records Processed	Number Of Records Failed	Total Number Of Records	Log File Name
02/01/2015 09:30:20	Success	2	0	2	1422779417#02012015093020.txt

- The URI you call is listed under **Call Routing > Global Dial Plan Replication > Imported Directory URIs**:

Find and List Imported Directory URIs Related Links: [ILS Configuration](#) [Go](#)

Status

2 records found

Imported Directory URI (1 - 2 of 2) Rows per Page 50

Find Imported Directory URI where URI * begins with *

URI ^	PSTN Fallover	Imported Global Dial Plan Catalog
meet.user1@company.com		ImportedGlobalDialPlanCatalog
meet.user2@company.com		ImportedGlobalDialPlanCatalog

Troubleshoot

There is currently no specific troubleshooting information available for this configuration.

Related Information

- [TelePresence Management Suite Provisioning Extension Guides](#)
- [CUCM Maintain and Operate Guides](#)
- [Technical Support & Documentation - Cisco Systems](#)